OMRON

MX2 INVERTER

Born to drive machines

» Omron Quality with a capital 'Q'

» High programming functionality

» Built-in safety

realizing

OMRON

Harmonised motor and machine control

The MX2 is specifically designed to drive machines. It has been developed to harmonise advanced motor and machine control. Thanks to its advanced design and algorithms the MX2 provides smooth control down to zero speed, plus precise operation for fast cyclic operations and torque control capability in open loop. The MX2 also gives you comprehensive functionality for machine control such as positioning, speed synchronisation and logic programming. The MX2 is fully integrated within the Omron smart automation platform. The MX2 is the child of a true leader in machine automation.

MOTOR CONTROL

200% starting torque
- Near stand-still operation (0.5 Hz)
- Smooth control of high inertia loads
- Control of fast cyclic loads

Torque control in open loop
- Ideal for low to medium torque applications
- Can replace a flux vector or servo drive in suitable systems

Special motors
- Permanent magnet motors
- High speed motors up to 1000 Hz

One parameter auto-tuning
- Just by entering the kW rating of the motor the MX2 gives you smooth and safe operation

MACHINE CONTROL

Safety inside
- Conforms to safety norm ISO-13849 CAT3 performance level PLd
- 2 Safety inputs
- External device monitoring (EDM)

Logic programming
- Flow chart programming
- Intuitive – up to 5 tasks in parallel

Positioning
- Up to 8 pre-set positions with “Homing”
- Speed synchronisation

Integrated in the Omron Smart Automation
- CX-Drive programming tool connected via integrated USB port on MX2.
- Modbus RS485 built-in
- Option units for EtherCAT, Profibus, DeviceNet, ML-II and more…

NO MAINTENANCE 10 YEARS

RoHS Compliant

TÜVRheinland®

100% Control...

High starting torque and torque control capability in open loop mode give you full control of your machine dynamics and performance. Options for all of the major fieldbus systems and a 24 VDC external supply keeps you in full control of your machine operation.

...0% risk!

Safety is embedded in the MX2, according to ISO 13849-1, Cat 3, with two safety inputs and an External Device Monitoring (EDM) output.
No external contactors on the motor side are required, meaning simpler wiring for the user.

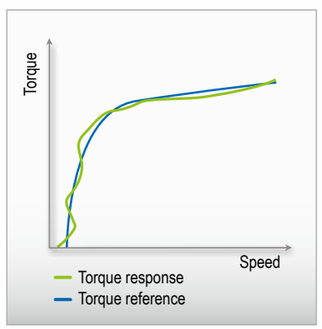

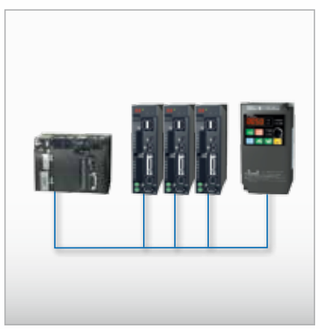

Torque master

The MX2 delivers 200% starting torque near stand-still (0.5 Hz) and can operate in torque control in open loop mode. This allows the MX2 to be used in applications where closed loop AC vector drives were previously used.

Easy network integration

Built-in RS485 Modbus communications and the possibility for integration in standard industrial networks, such as Dnet, Profibus, CANopen, CompoNet, ML-II or EtherCat makes the MX2 exceptionally easy to integrate.

External 24 VDC for continuous operation

With no additional hardware, a 24 VDC connection to the MX2 ensures the CPU is always in control, even if the main input is removed. This feature is vital in providing a controlled stop in emergency situations and in keeping the network communications operating.

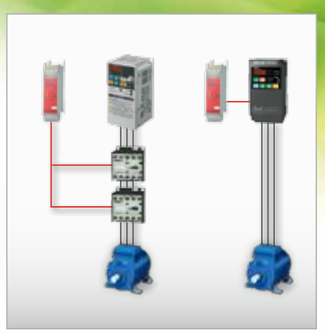

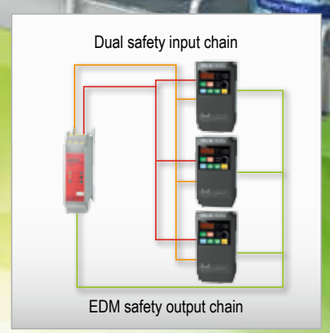

Safety embedded; ISO 13849-1, cat 3

Dual contactors at the output of the inverter are no longer required. Direct connection to a safety controller ensures compliance to ISO 13849-1, cat 3.

EDM monitoring output

An External Device Monitoring (EDM) output confirms the safety status of the inverter, saving you the cost and wiring of external devices to carry out the same function.

Direct integration into the safety circuit

MX2 inverters can fit easily into the safety circuit. The safety inputs can be linked from one inverter to another without additional safety relays.

Position and run!

The MX2 is a drive and position controller in one, ideal for modular machines where moderate positional accuracy is required. Speed synchronisation is also possible, with no additional programming required.

Speed synchronisation

With no external hardware required, and via standard parameter settings, speed synchronisation can be achieved. The MX2 will act as a speed follower to an external pulse generator/encoder signal up to 32 KHz.

Positioning functionality

Specially developed application functionality enables the MX2 to solve simple positioning tasks without the need for an external controller. Up to 8 positions, plus home, can be selected by the user, and furthermore, the MX2 can be switched between speed and position mode.

Program and play!

The MX2 gives you the power to create smart solutions using PLC functionality, as standard. Via an intuitive flow chart programming tool, you can create programs with up to 1000 lines of code and with 5 tasks running in parallel.

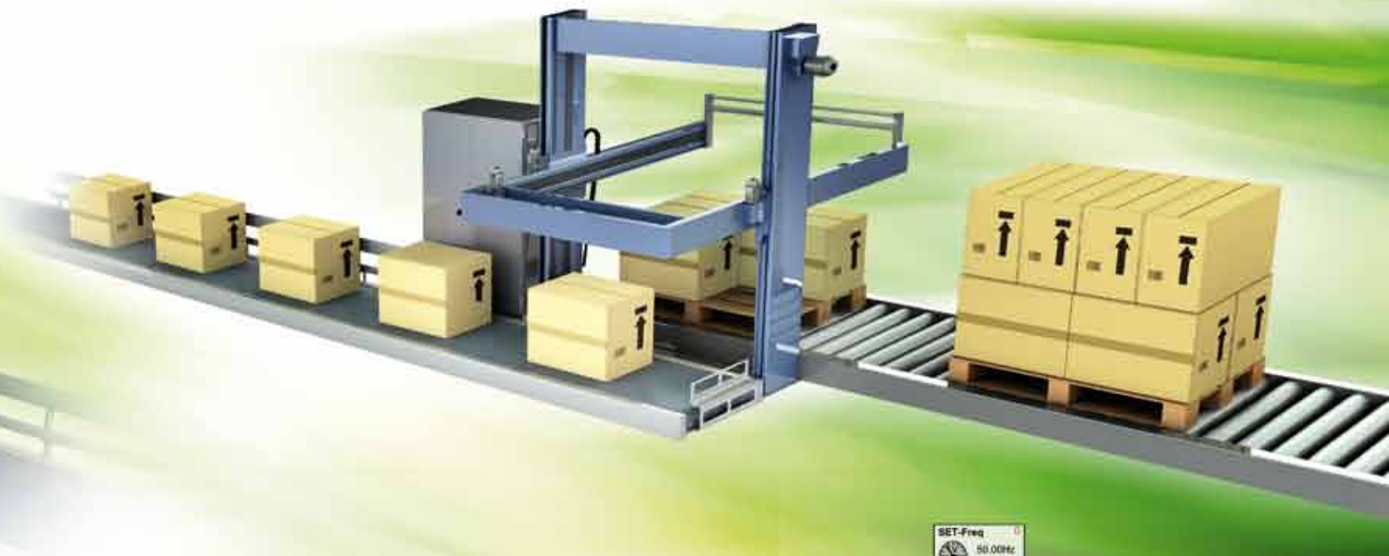

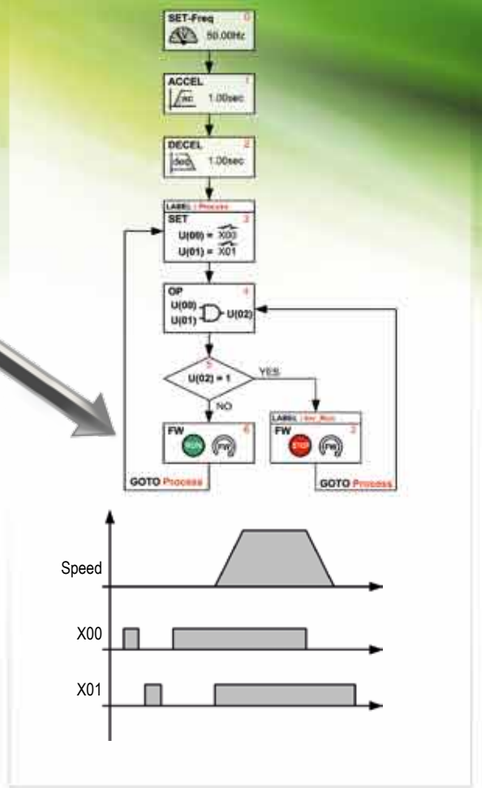

Free to program

- Intuitive and user friendly flow chart programming
- Integrated in CX-Drive
- Up to 1000 lines in a program
- 5 tasks can run in parallel

Multi-function Compact Inverter

3G3MX2

With Machine Automation Mentality

- Current vector Control.
- High Starting torque: 200% at 0.5 Hz.
- Double rating VT 120%/1 min and CT 150% /1 min.
- Speed range up to 1,000 Hz.
- Positioning functionality.
- Safety embedded compliant with ISO 13849-1: 2006 (PLd) (double input circuit and external device monitor)
- Modbus communications.
- PC Configuration tool: CX-Drive.

Interpreting Model Numbers

3G3MX2-□□□□□-□

3G3MX2

Voltage class

B	1-phase 200 VAC (200-V class)
2	3-phase 200 VAC (200-V class)
4	3-phase 400 VAC (400-V class)

IP Rating

A	IP20
D	IP54 Include Class 2 EMC Filter

Max. applicable motor capacity (CT)

001	0.1 kW	037	3.7 kW
002	0.2 kW	040	4.0 kW
004	0.4 kW	055	5.5 kW
007	0.75 kW	075	7.5 kW
015	1.5 kW	110	11 kW
022	2.2 kW	150	15 kW
030	3.0 kW		

IP54 Enclosure Type

E	Book Type
EC	Customised Version

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

3G3MX2 Inverter Models

Rated voltage	Enclosure ratings	Max. applicable motor capacity		IP20 Model	IP54 Model
		CT: Heavy load	VT: Light load		
3-phase 200 VAC	IP20	0.1kW	0.2 kW	3G3MX2-A2001	3G3MX2-D2001-E/EC
		0.2 kW	0.4 kW	3G3MX2-A2002	3G3MX2-D2002-E/EC
		0.4 kW	0.75 kW	3G3MX2-A2004	3G3MX2-D2004-E/EC
		0.75 kW	1.1 kW	3G3MX2-A2007	3G3MX2-D2007-E/EC
		1.5 kW	2.2 kW	3G3MX2-A2015	3G3MX2-D2015-EC
		2.2 kW	3.0 kW	3G3MX2-A2022	3G3MX2-D2022-EC
		3.7 kW	5.5 kW	3G3MX2-A2037	3G3MX2-D2037-EC
		5.5 kW	7.5 kW	3G3MX2-A2055	3G3MX2-D2055-EC
		7.5 kW	11 kW	3G3MX2-A2075	3G3MX2-D2075-EC
		11 kW	15 kW	3G3MX2-A2110	3G3MX2-D2110-EC
		15 kW	18.5 kW	3G3MX2-A2150	3G3MX2-D2150-EC
3-phase 400 VAC	IP20	0.4 kW	0.75 kW	3G3MX2-A4004	3G3MX2-D4004-EC
		0.75 kW	1.5 kW	3G3MX2-A4007	3G3MX2-D4007-EC
		1.5 kW	2.2 kW	3G3MX2-A4015	3G3MX2-D4015-EC
		2.2 kW	3.0 kW	3G3MX2-A4022	3G3MX2-D4022-EC
		3.0 kW	4.0 kW	3G3MX2-A4030	3G3MX2-D4030-EC
		4.0 kW	5.5 kW	3G3MX2-A4040	3G3MX2-D4040-EC
		5.5 kW	7.5 kW	3G3MX2-A4055	3G3MX2-D4055-EC
		7.5 kW	11 kW	3G3MX2-A4075	3G3MX2-D4075-EC
		11 kW	15 kW	3G3MX2-A4110	3G3MX2-D4110-EC
		15 kW	18.5 kW	3G3MX2-A4150	3G3MX2-D4150-EC
1-phase 200 VAC	IP20	0.1 kW	0.2 kW	3G3MX2-AB001	3G3MX2-DB001-E/EC
		0.2 kW	0.4 kW	3G3MX2-AB002	3G3MX2-DB002-E/EC
		0.4 kW	0.55 kW	3G3MX2-AB004	3G3MX2-DB004-E/EC
		0.75 kW	1.1 kW	3G3MX2-AB007	3G3MX2-DB007-E/EC
		1.5 kW	2.2 kW	3G3MX2-AB015	3G3MX2-DB015-EC
		2.2 kW	3.0 kW	3G3MX2-AB022	3G3MX2-DB022-EC

For option, refer to 16 page.

Support Software

Product name	Specifications	Number of licenses	Media	Model	Standards
FA Integrated Tool Package CX-OneVer. 4.□	The CX-One is a package that integrates the Support Software for OMRON PLCs and components. CX-One runs on the following OS. Windows 2000 (Service Pack 4 or higher), XP, Vista or 7 **Note:** Except for 64-bit version CX-One Ver.4.□ includes CX-Programmer Ver.9.□. For details, refer to the CX-One catalog (Cat. No. R134).	1 license ✻1	CD	**CXONE-AL01C-V4**	---
			DVD ✻2	**CXONE-AL01D-V4**	
FA Integrated Tool Package CX-One Lite Ver. 4.□	The CX-One Lite is a subset of the complete CX-One package that provides only the Support Software required for micro PLC applications. CX-One Lite runs on the following OS. Windows 2000 (Service Pack 4 or higher), XP, Vista or 7 **Note:** Except for 64-bit version CX-One Ver.4.□ includes Micro PLC Edition CX-Programmer Ver.9.□. .	1 license	CD	**CXONE-LT01C-V4**	
	CX-Drive can still be ordered individually in the following model numbers.				
CX-Drive Ver.1.□	Application software to set and control data for Inverters and Servos. OS: Windows 2000 (Service Pack 3a or higher), XP, or Vista	1 license	CD	**WS02-DRVC1**	---

✻1. Multi licenses are available for the CX-One (3, 10, 30, or 50 licenses).
✻2. When purchasing the DVD format, verify the computer model and DVD drive specifications before purchasing.

Standard Specification List

3-phase 200 V Class

Function name			3-phase 200 V										
Model name (3G3MX2-□)			2001	2002	2004	2007	2015	2022	2037	2055	2075	2110	2150
Applicable motor capacity	kW	CT	0.1	0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15
		VT	0.2	0.4	0.75	1.1	2.2	3.0	5.5	7.5	11	15	18.5
	HP	CT	1/8	1/4	1/2	1	2	3	5	7 1/2	10	15	20
		VT	1/4	1/2	1	1 1/2	3	4	7 1/2	10	15	20	25
Rated output capacity [kVA]	200 V	CT	0.2	0.5	1.0	1.7	2.7	3.8	6.0	8.6	11.4	16.2	20.7
		VT	0.4	0.6	1.2	2.0	3.3	4.1	6.7	10.3	13.8	19.3	23.9
	240 V	CT	0.3	0.6	1.2	2.0	3.3	4.5	7.2	10.3	13.7	19.5	24.9
		VT	0.4	0.7	1.4	2.4	3.9	4.9	8.1	12.4	16.6	23.2	28.6
Rated input voltage			3-phase 200 V - 15% to 240 V + 10%, 50/60 ± 5%										
Rated output voltage			3-phase 200 to 240 V (The output cannot exceed the incoming voltage).										
Rated output current [A]		CT	1.0	1.6	3.0	5.0	8.0	11.0	17.5	25.0	33.0	47.0	60.0
		VT	1.2	1.9	3.5	6.0	9.6	12.0	19.6	30.0	40.0	56.0	69.0
Short-time deceleration braking torque (%) (Discharge Resistor not connected)			50	50	50	50	50	20	20	20	20	10	10
Braking Resistor circuit *	Regenerative braking		Built-in Braking Resistor circuit (separate Discharge Resistor)										
	Min. connectable resistance [Ω]		100	100	100	50	50	35	35	20	17	17	10
Weight [kg]			1.0	1.0	1.1	1.2	1.6	1.8	2.0	3.3	3.4	5.1	7.4
Dimensions (width × height) [mm]			68 × 128				108 × 128		140 × 128	140 × 260		180 × 296	220 × 350
Dimensions (depth) [mm]			109		122.5	145.5	170.5		170.5	155		175	

✻ The BRD usage is 10%.

3-phase 400 V Class

Function name			3-phase 400 V									
Model name (3G3MX2-□)			4004	4007	4015	4022	4030	4040	4055	4075	4110	4150
Applicable motor capacity	kW	CT	0.4	0.75	1.5	2.2	3.0	4.0	5.5	7.5	11	15
		VT	0.75	1.5	2.2	3.0	4.0	5.5	7.5	11	15	18.5
	HP	CT	1/2	1	2	3	4	5	7 1/2	10	15	20
		VT	1	2	3	4	5	7 1/2	10	15	20	25
Rated output capacity [kVA]	380 V	CT	1.1	2.2	3.1	3.6	4.7	6.0	9.7	11.8	15.7	20.4
		VT	1.3	2.6	3.5	4.5	5.7	7.3	11.5	15.1	20.4	25.0
	480 V	CT	1.4	2.8	3.9	4.5	5.9	7.6	12.3	14.9	19.9	25.7
		VT	1.7	3.4	4.4	5.7	7.3	9.2	14.5	19.1	25.7	31.5
Rated input voltage			3-phase 380 V - 15% to 480 V + 10%, 50/60 ± 5%									
Rated output voltage			3-phase 380 to 480 V (The output cannot exceed the incoming voltage).									
Rated output current [A]		CT	1.8	3.4	4.8	5.5	7.2	9.2	14.8	18.0	24.0	31.0
		VT	2.1	4.1	5.4	6.9	8.8	11.1	17.5	23.0	31.0	38.0
Short-time deceleration braking torque (%) (Discharge Resistor not connected)			50	50	50	20	20	20	20	20	10	10
Braking Resistor circuit *	Regenerative braking		Built-in Braking Resistor circuit (separate Discharge Resistor)									
	Min. connectable resistance [Ω]		180	180	180	100	100	100	70	70	70	35
Weight [kg]			1.5	1.6	1.8	1.9	1.9	2.1	3.5	3.5	4.7	5.2
Dimensions (width × height) [mm]			108 × 128					140 × 128	140 × 260		180 × 296	
Dimensions (depth) [mm]			143.5	170.5				170.5	155		175	

✻ The BRD usage is 10%.

1-phase 200 V Class

Function name			1-phase 200 V					
Model name (3G3MX2-□)			B001	B002	B004	B007	B015	B022
Applicable motor capacity	kW	CT	0.1	0.2	0.4	0.75	1.5	2.2
		VT	0.2	0.4	0.55	1.1	2.2	3.0
	HP	CT	1/8	1/4	1/2	1	2	3
		VT	1/4	1/2	3/4	1 1/2	3	4
Rated output capacity [kVA]	200 V	CT	0.2	0.5	1.0	1.7	2.7	3.8
		VT	0.4	0.6	1.2	2.0	3.3	4.1
	240 V	CT	0.3	0.6	1.2	2.0	3.3	4.5
		VT	0.4	0.7	1.4	2.4	3.9	4.9
Rated input voltage			1-phase 200 V - 15% to 240 V + 10%, 50/60 Hz ± 5%					
Rated output voltage			3-phase 200 to 240 V (The output cannot exceed the incoming voltage).					
Rated output current [A]		CT	1.0	1.6	3.0	5.0	8.0	11.0
		VT	1.2	1.9	3.5	6.0	9.6	12.0
Short-time deceleration braking torque (%) (Discharge Resistor not connected)			50	50	50	50	50	20
Braking Resistor circuit *	Regenerative braking		Built-in Braking Resistor circuit (separate Discharge Resistor)					
	Min. connectable resistance [Ω]		100	100	100	50	50	35
Weight [kg]			1.0	1.0	1.1	1.6	1.8	1.8
Dimensions (width × height) [mm]			68 × 128			108 × 128		
Dimensions (depth) [mm]			109		122.5	170.5		

✻ The BRD usage is 10%.

Common Specifications

Function name		Specifications
Enclosure ratings *1		Open type (IP20)
Control	**Control method**	Phase-to-phase sinusoidal modulation PWM
	Output frequency range *2	0.10 to 400 Hz (or 1,000 Hz in the high-frequency mode; restrictions apply)
	Frequency precision *3	Digital command: ±0.01% of the max. frequency, Analog command: ±0.2% of the max. frequency (25°C±10°C)
	Frequency setting resolution	Digital setting: 0.01 Hz, Analog setting: One-thousandth of the maximum frequency
	Voltage/Frequency characteristics	V/f characteristics (constant/reduced torque) Sensorless vector control, V/f control with speed feedback
	Overload current rating	Heavy load rating (CT): 150%/60 s Light load rating (VT): 120%/60 s
	Instantaneous overcurrent protection	200% of the value of heavy load rating (CT)
	Acceleration/Deceleration time	0.01 to 3600 s (linear/curve selection), acceleration/deceleration 2 setting available
	Carrier frequency adjustment range	2 to 15 kHz (with derating)
	Starting torque	200%/0.5 Hz (sensorless vector control)
	External DC injection braking	Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that during operation, or via an external input. (Level and time settable).
Protective functions		Overcurrent, overvoltage, undervoltage, electronic thermal, temperature error, ground fault overcurrent at power-on status, rush current prevention circuit, overload limit, incoming overvoltage, external trip, memory error, CPU error, USP error, communication error, overvoltage suppression during deceleration, protection upon momentary power outage, emergency cutoff, etc.
Input signal	**Frequency settings**	Digital Operator External analog input signal: Variable resistance/0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)
	RUN/STOP command	Digital Operator External digital input signal (3-wire input supported), Modbus communication (Modbus-RTU)
	Multi-function input	7 points (Selectable from 59 functions)
	Analog input	2 points (Voltage FV terminal: 10 bits/0 to 10 V, Current FI terminal: 10 bits/4 to 20 mA)
	Pulse input	1 point (RP terminal: 32 kHz max., 5 to 24 VDC)
Output signal	**Multi-function output**	2 points (P1/EDM, P2; selectable from 43 functions)
	Relay output	1 point (1c contact: MC, MA, MB; selectable from 43 functions)
	Analog output (Frequency monitor)	1 point (AM terminal: Voltage 10 bits/0 to 10 V) (Frequency, current selectable)
	Pulse output	1 point (MP terminal: 32 kHz max., 0 to 10 V)
Communications	**RS-422**	RJ45 connector (for Digital Operator)
	RS-485	Control circuit terminal block, Modbus communication (Modbus-RTU)
	USB	USB1.1, mini-B connector
Other functions		AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration/deceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent suppression function, etc.
General specifications	**Ambient temperature**	-10 to 50°C (However, derating is required).
	Ambient storage temperature	-20°C to 65°C (short-time temperature during transport)
	Humidity	20% to 90% RH (with no condensation)
	Vibration	5.9 m/s^2 (0.6G), 10 to 55 Hz
	Location	At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)
Options		DC reactor, AC reactor, radio noise filter, input noise filter, output noise filter, regenerative braking unit, Braking Resistor, EMC noise filter, etc.

Note: **1.** The applicable motor is a 3-phase standard motor. For using any other type, be sure that the rated current does not exceed that of the Inverter.
2. Output voltage decreases according to the level of the power supply voltage.
3. The braking torque at the time of capacitor feedback is an average deceleration torque at the shortest deceleration (when it stops from 50 Hz). It is not a continuous regeneration torque. Also, the average deceleration torque varies depending on the motor loss. The value is reduced in operation over 50 Hz.

✻**1.** Protection method complies with JEM 1030.
✻**2.** To operate the motor at over 50/60 Hz, contact the motor manufacturer to find out the maximum allowable speed of revolution.
✻**3.** For the stable control of the motor, the output frequency may exceed the maximum frequency set in A004 (A204) by 2 Hz max.

Terminal Block Specifications

Names of Parts Inside the Terminal Block Cover

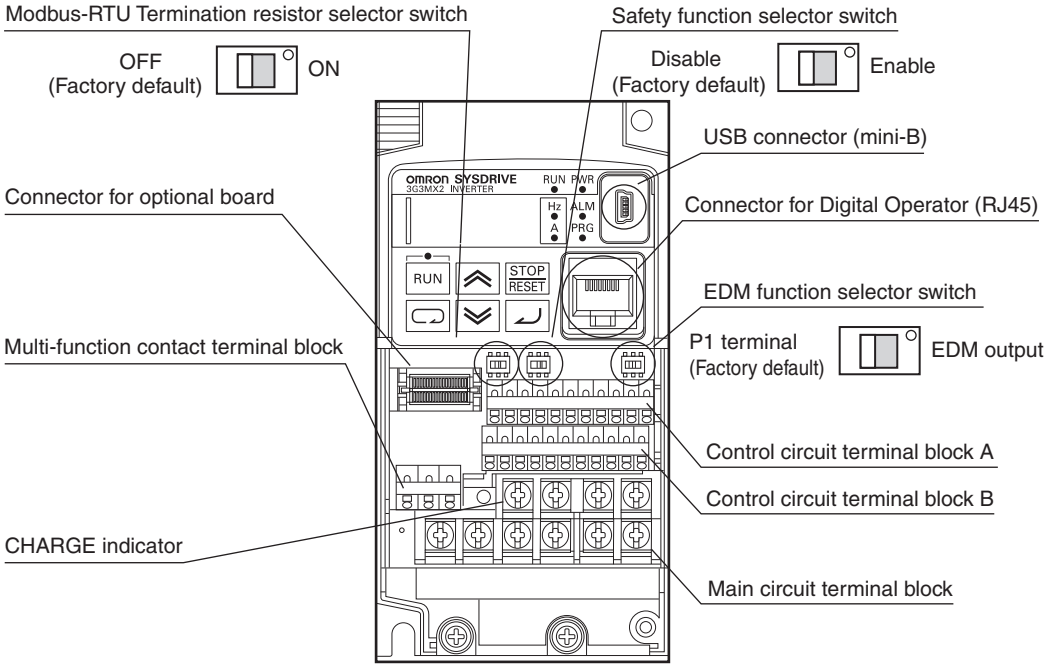

Name	Description
Modbus-RTU Termination resistor selector switch	Use this Terminal Resistor selector switch for RS-485 terminals on the control circuit terminal block. When this switch is turned ON, the internal 200 Ω Resistor is connected.
Safety function selector switch	Turn this switch ON when using the safety function. Turn OFF the power before turning this switch ON/OFF. For details, refer to User's Manual (I570).
EDM function selector switch	Turn this switch ON when using the EDM output of the safety function. Turn OFF the power before turning this switch ON/OFF.For details, refer to User's Manual (I570).
USB connector	Use this mini-B USB connector to connect a PC. Even when the Inverter is being operated by a PC, etc., via USB connection, it can still be operated using the Digital Operator.
Connector for Digital Operator	Use this connector to connect the Digital Operator.
Connector for optional board	Use this connector to mount the optional board. (The optional board will be released soon.)
Control circuit terminal blocks A and B	These terminal blocks are used to connect various digital/analog input and output signals for inverter control, etc.
Multi-function contact terminal block	Use this SPDT contact terminal block for relay outputs.
Main circuit terminal block	Use this terminal block to connect an output to the motor and Braking Resistor, etc. Also, use this terminal block to connect the inverter to the main power supply.
CHARGE indicator (Charge indicator LED)	This LED indicator is lit if the DC voltage of the main circuit (between terminals P/+2 and N/-) remains approx. 45 V or above after the power has been cut off. Before wiring, etc. confirm that the Charge LED indicator is turned OFF.

Main Circuit Terminals Specifications

[Main Circuit Terminal Block]
3G3MX2-A2001 to A2037
3G3MX2-A4004 to A4040
3G3MX2-AB001 to AB022

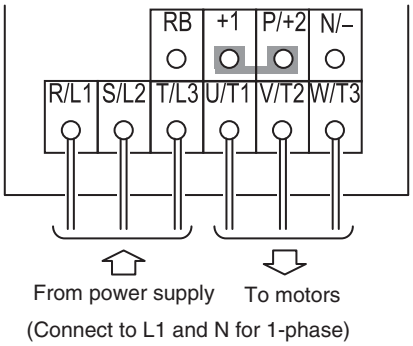

[Main Circuit Terminal Block]
3G3MX2-A2001 to A2037
3G3MX2-A4004 to A4040
3G3MX2-AB001 to AB022

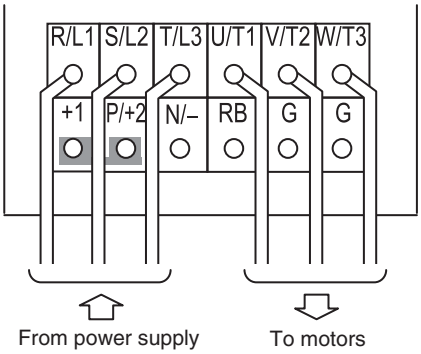

Terminal symbol	Terminal name	Description
R/L1	Main power supply input terminal	Connect the input AC power supply.In the case of a 1-phase 200 V power supply, connect to L1 and N.
S/L2		
T/L3		
U/T1	Inverter output terminal	Connect a 3-phase motor.
V/T2		
W/T3		
+1	DC reactor connection terminal	Remove the shorting bar between terminals +1 and P/+2, and connect the optional DC reactor.
P/+2		
P/+2	Braking Resistor connection terminal	Connect optional braking resistors. (If a braking torque is required)
RB		
P/+2	Regenerative braking unit connection terminal	Connect optional regenerative braking units. (When braking torque is required or the built-in braking circuit is not sufficient)
N/–		
G ⏚	Ground terminal	This is a ground terminal. Connect this terminal to the ground. Provide Class D grounding for 200 V class models, and class C grounding for 400 V class models. On 200 V class models of 3.7 kW or below and 400 V class models of 4.0 kW or below, the ground terminal is located on the cooling fin.

Control Circuit Terminals Specifications

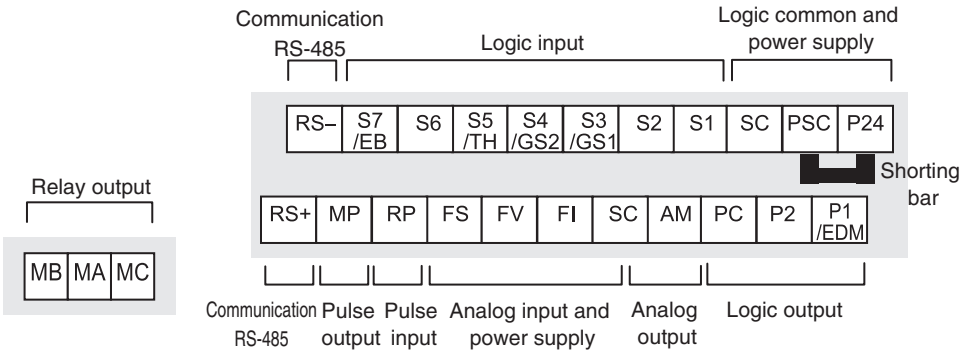

		Terminal symbol	Terminal name	Description	Specifications
Analog	Power supply	SC	Input signal common	This is a common terminal used by the internal power supply, digital input and analog input/ output terminals.	
		FS	Frequency reference power supply	10 VDC power supply for the FV terminal.	Allowable max. current: 7 mA
	Frequency setting input	FV	Frequency reference input terminal (analog voltage input)	Use this terminal if the frequency reference is provided by 0 to 10 VDC voltage input.	Input impedance Approx. 10 kΩ Allowable input voltage range –0.3 to +12 VDC
		FI	Frequency reference terminal (analog current input)	Use this terminal if the frequency reference is provided by 4 to 20 mA current input.	Input impedance 100 Ω Allowable input range 0 to 24 mA
	Sensor input	S5/TH	External thermistor input (also used as multi-function input terminal)	Connect an external thermistor between the SCs, to trip the Inverter when a temperature error occurs. (The inverter will trip when the input from thermistor is approx. 3 kΩ or higher.) Since this input is also used as the multi-function input terminal, setting of C005 is required. For details, refer to User's Manual (I570).	PTC type
	Output	AM	Multi-function analog output (voltage)	Specified signals can be output using voltage signals of 0 to 10 VDC.	AM
Digital	Power supply	SC	Input signal common	This is a common terminal used by the internal power supply, digital input and analog input/ output terminals.	
		P24	Power supply terminal for input signal	24 VDC power supply for contact input signal.This is used as a common terminal if the source logic is input.	Allowable max. current: 100 mA
		PSC	Power supply terminal for input terminal	Sink logic input: Shorted with P24 Source logic input: Shorted with SC To drive the contact input using an external power supply, remove the shorting bar. For details, refer to User's Manual (I570).	
	Input / Contact	S7/EB S6 S5/TH S4/GS2 S3/GS1 S2 S1	Multi-function input terminal	Select 7 functions from among 59, and allocate them to terminals S1 through S7/EB. Both sink and source logics are supported. For details, refer to User's Manual (I570).	Voltage between each input and PSC ON voltage: 18 V min. OFF voltage: 3 V max. Allowable max. voltage: 27 VDC Load current: 5 mA (at 24 V)
		S4/GS2 S3/GS1	Safety input	Enabled when the safety function selector switch is turned ON. For details, refer to User's Manual (I570).	

			Terminal symbol	Terminal name	Description	Specifications
Digital	Input	Pulse	RP	Pulse input-A	A pulse input for frequency setting. (Take note that the internal circuit is different from input terminals S7/EB.)	Input pulse 32 kHz max. Voltage between input and SC ON voltage: 4 V min. OFF voltage: 1 V max. Allowable max. voltage: 27 VDC
			S7/EB	Pulse input-B	A pulse input for frequency setting. (Take note that the internal circuit is different from input terminal RP.)	Input pulse 1.8 kHz max. ON voltage: 18 V min. OFF voltage: 3 V max. Allowable max. voltage: 27 VDC Load current: 5 mA (at 24 V)
	Output	Open collector	P1/EDM P2	Multi-function output terminal	Select 2 functions from among 43, and allocate them to terminals P1 through P2. Both sink and source logics are supported. For details, refer to User's Manual (I570).	Open collector output Between each terminal and PC Allowable max. voltage: 27 V Allowable max. current: 50 mA Voltage drop when ON: 4 V max.
			P1/EDM	Safety monitor	Enabled when the EDM function selector switch is ON. For details, refer to "Safety Function" on page 5-167.	
		Relay	MA MB	Relay output terminal	Select the desired functions from among 43 functions, and allocate them to these terminals. SPDT contact. The factory default of Relay Output (MA, MB) Contact Selection (C036) is NC contact between MA-MC, and NO contact between MB-MC.	Max. contact capacity MA-MC: 250 VAC, 2 A (resistance) 0.2 A (induction) MB-MC: 250 VAC, 1 A (resistance) 0.2 A (induction) Contact min. capacity 100 VAC, 10mA 5 VDC, 100mA
			MC	Relay output common		
		Pulse	MP	Pulse output	Pulses are output.	Output pulse: 32 kHz max. Output voltage: 10 VDC Allowable max. current: 2 mA
Serial communication			RS+ RS–	Modbus port (RS-485)	RS-485 port RS+ RS-485 differential (+) signal RS- RS-485 differential (–) signal	Max. speed: 115.2 kbps Built-in Terminal Resistor: 200 Ω Slide switch selection

Switching Method for Input Control Logics

Multi-function input terminals are set to sink logic at the factory.
To switch the input control logic to source logic, remove the shorting bar between terminals P24 and PSC on the control circuit terminal block, and connect it between terminals PSC and SC.

(1) Sink logic

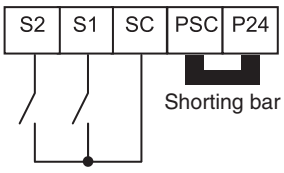

(2) Source logic

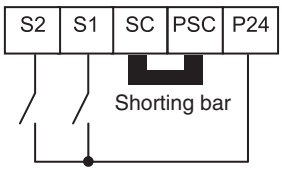

Connection Diagram

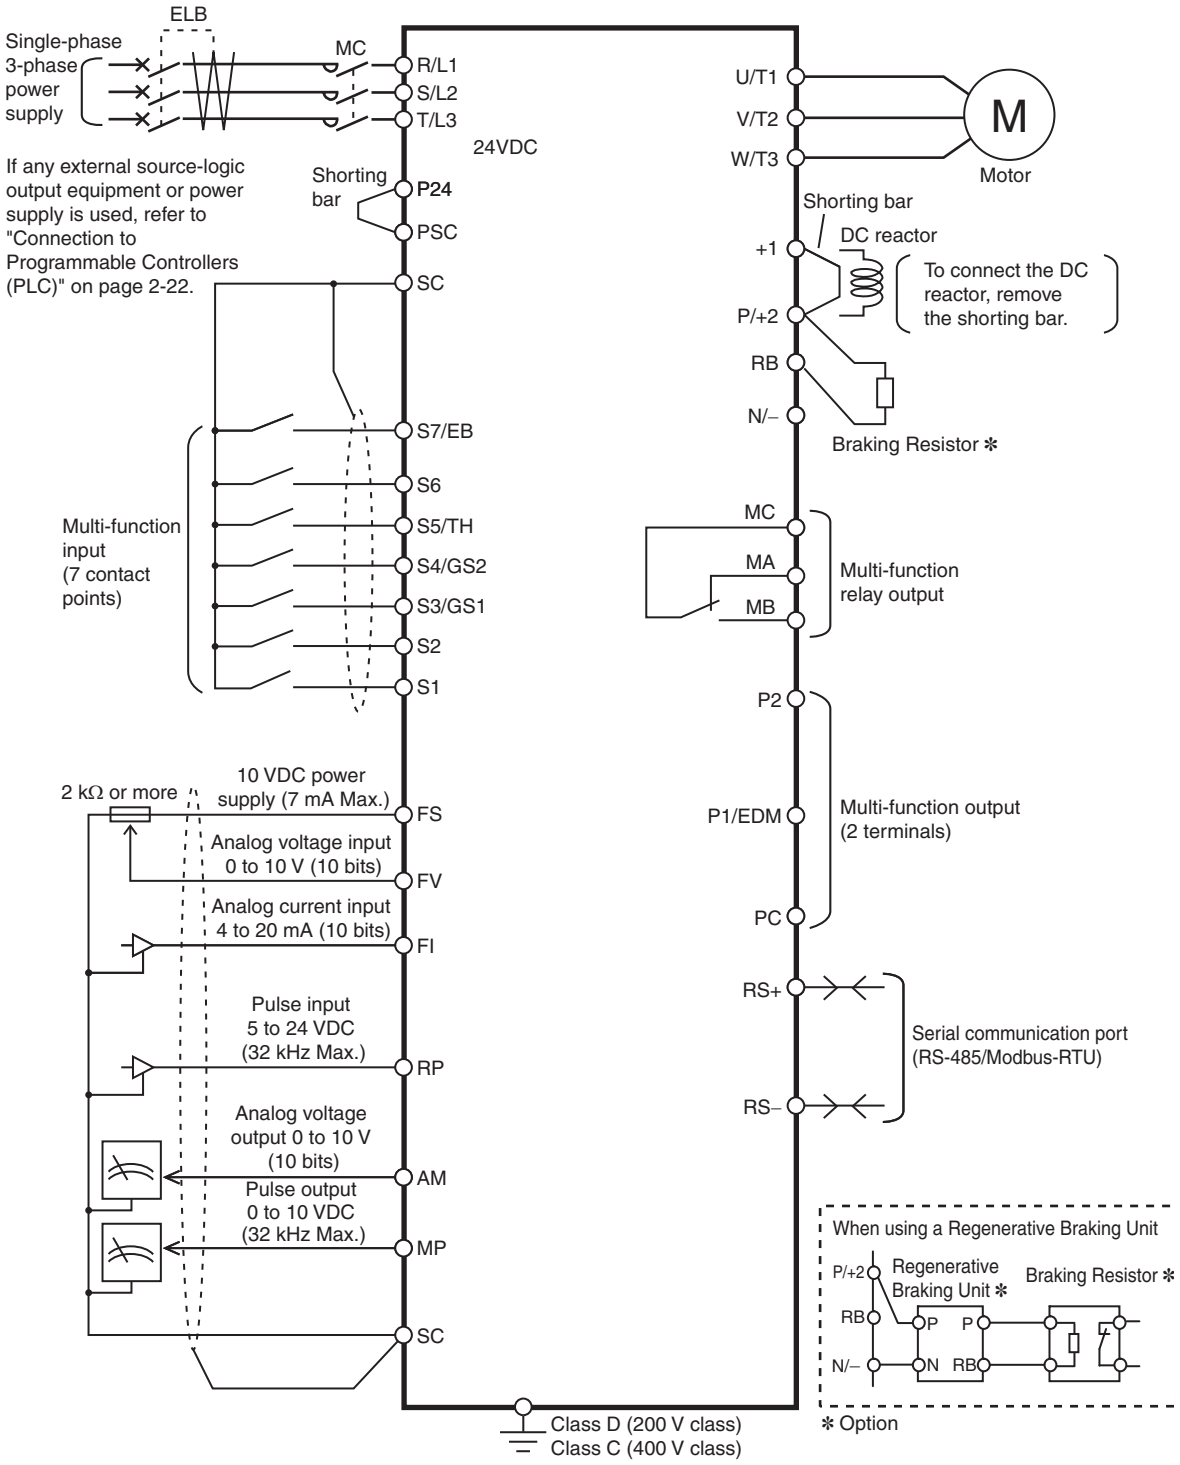

Note: 1. Connect a single-phase 200 V AC input to terminals L1 and N.
2. Factory default settings for relay output are NC contact for MA and NO contact for MB.

Names of Parts and their Descriptions

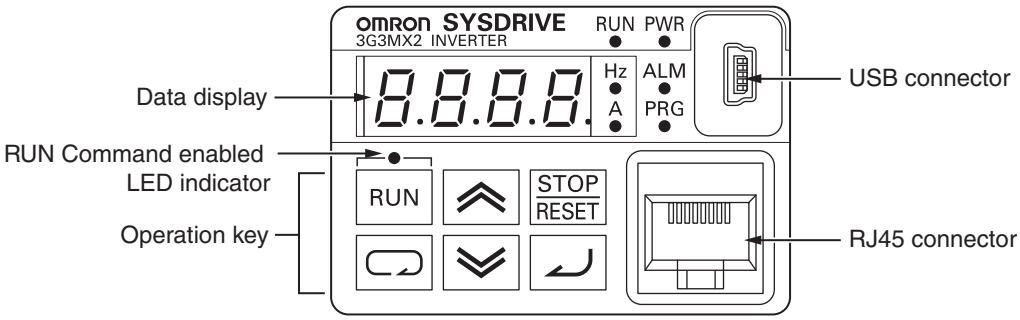

	Name	Description
PWR ●	POWER LED	Lit (green) while the Inverter is receiving power.
ALM ●	ALARM LED	Lit (red) when the Inverter trips. For information on how to reset the trip, refer to User's Manual (I570).
PRG ●	PROGRAM LED indicator	Lit (green) when the displayed data (set value) can be changed. Blinks if the set value is invalid. Refer to User's Manual (I570).
RUN ●	RUN (during RUN) LED indicator	Lit (green) when the Inverter is running. (Lit when there is either a "valid RUN command" or "inverter output." Accordingly, it is also lit when a RUN command is issued at a set frequency of 0 Hz or while the motor is decelerating after the RUN command is turned OFF.)
Hz ●	Monitor LED indicator (Hz)	Lit (green) when the displayed data is frequency.
A ●	Monitor LED indicator (A)	Lit (green) when the displayed data is current.
—●—	RUN Command enabled LED indicator	Lit (green) when the RUN command is set to the Digital Operator. (The RUN key on the Digital Operator is enabled.)
8.8.8.8.	Display	Various parameters, frequency/set value and other data are displayed (red).
RUN	RUN key	Runs the Inverter. Take note that this key is enabled only when the RUN command destination is the Digital Operator.
STOP/RESET	STOP/RESET key	This key decelerates the Inverter to a stop. (Although the STOP/RESET key is enabled even when a RUN command is issued to a destination other than the Digital Operator (factory default), it can be disabled by a Setting (b087).) If the Inverter is already tripped, the trip will be reset (return from the tripping).
	Mode key	Parameter is displayed: Move to the beginning of the next function group. Data is displayed: Cancel the setting and return to the parameter display. Individual input mode: Move the blinking digit to the left. Regardless of the displayed screen, pressing and holding this key (for 1 second or more) displays the data for Output Frequency Monitor (d001).
	Increment key Decrement key	These keys are used to increment/decrement a parameter or set data. Pressing and holding each key increases the incrementing/decrementing speed. Pressing the Increment and Decrement keys together activates the "Individual Input MODE" where each digit can be edited independently.
	Enter key	Parameter is displayed: Move to the data display. Data is displayed: Confirm/store the setting (in the EEPROM) and return to the parameter display. Individual input mode: Move the blinking digit to the right.
	USB connector	Use this connector (mini-B type) to connect a PC. The Inverter can still be operated from the Digital Operator even when it is being operated using a PC, etc., via USB communication.
	RJ45 connector	Use this connector (RS-422) to connect the optional Remote Operator. Once the Remote Operator is connected, the keys on the main unit become disabled. In this case, use b150 to set the item to be displayed.

Dimensions

(Unit: mm)

3G3MX2-AB001
3G3MX2-AB002
3G3MX2-AB004
3G3MX2-A2001
3G3MX2-A2002
3G3MX2-A2004
3G3MX2-A2007

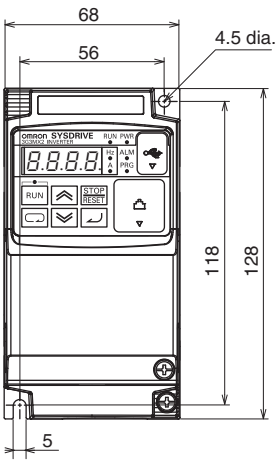

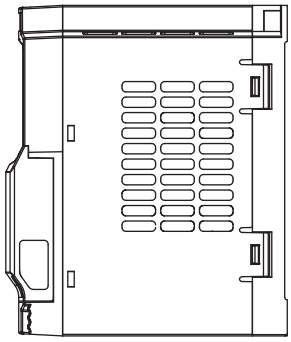

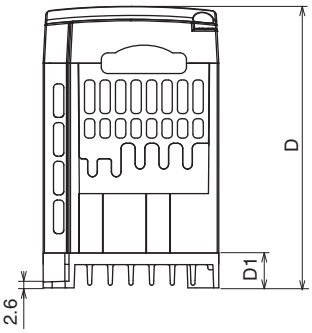

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
1-phase 200 V	3G3MX2-AB001 3G3MX2-AB002	68	128	109	13.5
	3G3MX2-AB004			122.5	27
3-phase 200 V	3G3MX2-A2001 3G3MX2-A2002			109	13.5
	3G3MX2-A2004			122.5	27
	3G3MX2-A2007			145.5	50

3G3MX2-AB007
3G3MX2-AB015
3G3MX2-AB022
3G3MX2-A2015
3G3MX2-A2022
3G3MX2-A4004
3G3MX2-A4007
3G3MX2-A4015
3G3MX2-A4022
3G3MX2-A4030

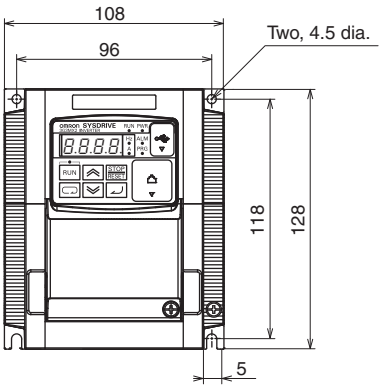

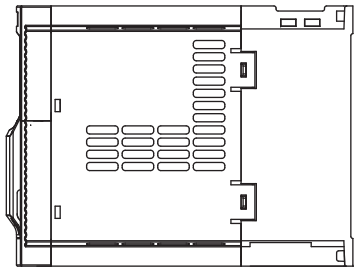

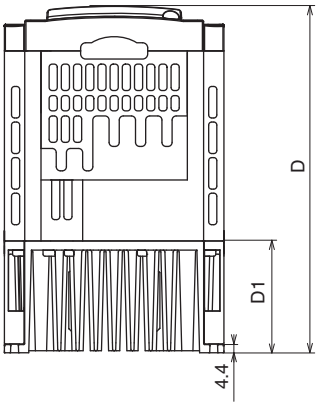

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
1-phase 200 V	3G3MX2-AB007 3G3MX2-AB015 3G3MX2-AB022	108	128	170.5	55
3-phase 200 V	3G3MX2-A2015 3G3MX2-A2022				
	3G3MX2-A4004			143.5	28
3-phase 400 V	3G3MX2-A4007 3G3MX2-A4015 3G3MX2-A4022 3G3MX2-A4030			170.5	55

3G3MX2-A2037
3G3MX2-A4040

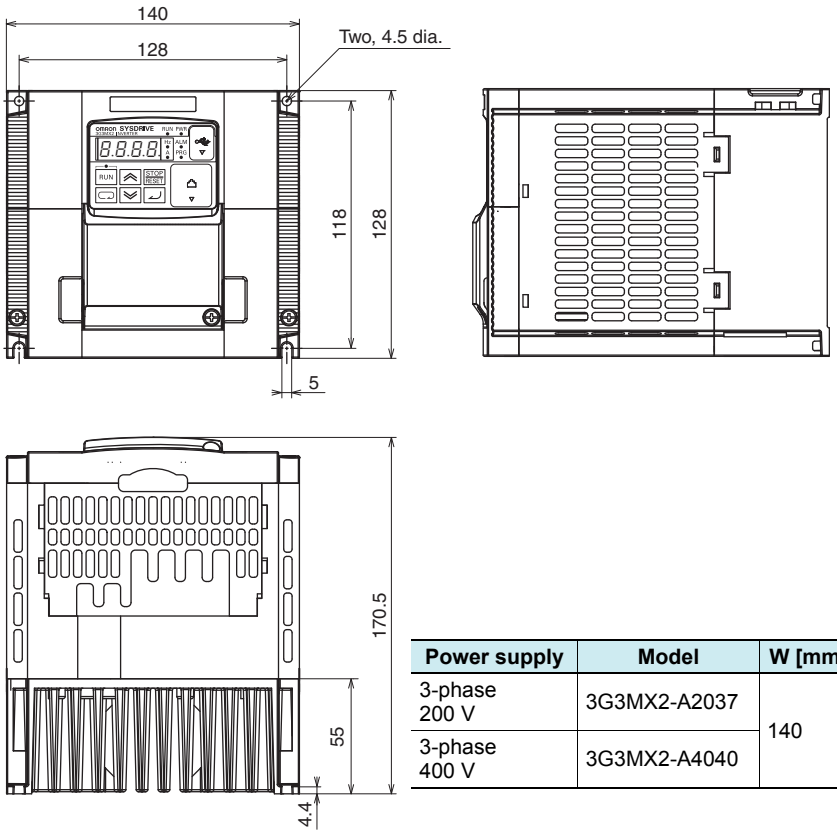

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
3-phase 200 V	3G3MX2-A2037	140	128	170.5	55
3-phase 400 V	3G3MX2-A4040				

3G3MX2-A2055
3G3MX2-A2075
3G3MX2-A4055
3G3MX2-A4075

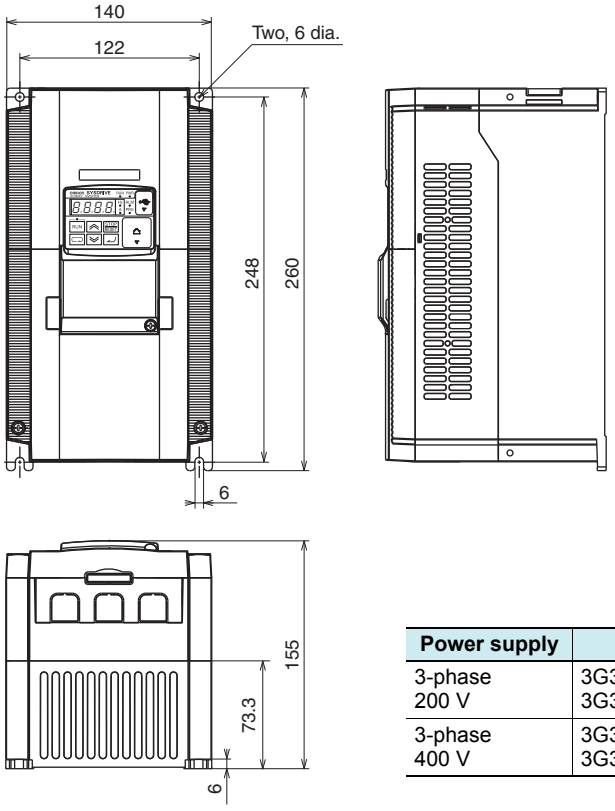

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
3-phase 200 V	3G3MX2-A2055 3G3MX2-A2075	140	260	155	73.3
3-phase 400 V	3G3MX2-A4055 3G3MX2-A4075				

3G3MX2-A2110
3G3MX2-A4110
3G3MX2-A4150

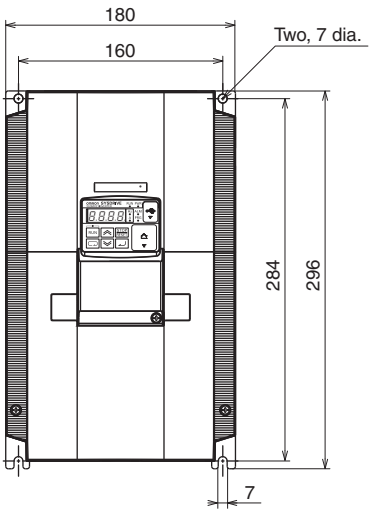

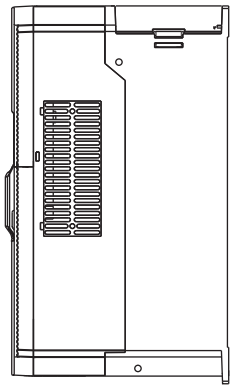

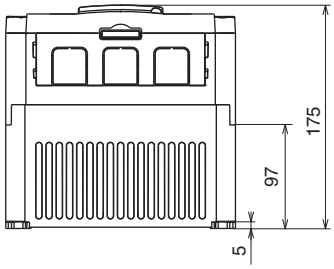

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
3-phase 200 V	3G3MX2-A2110	180	296	175	97
3-phase 400 V	3G3MX2-A4110 3G3MX2-A4150				

3G3MX2-A2150

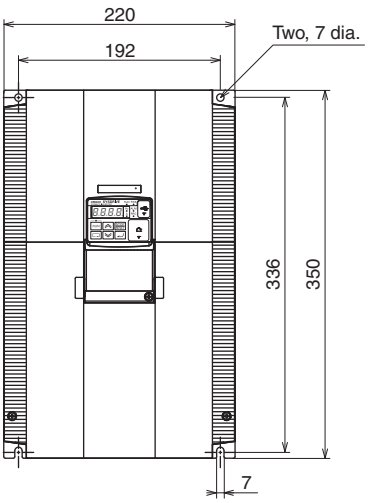

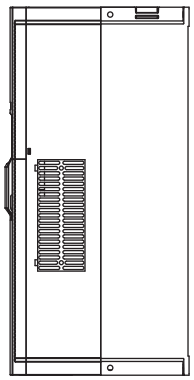

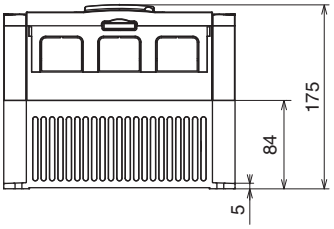

Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
3-phase 200 V	3G3MX2-A2150	220	350	175	84

IP54

Figure 1

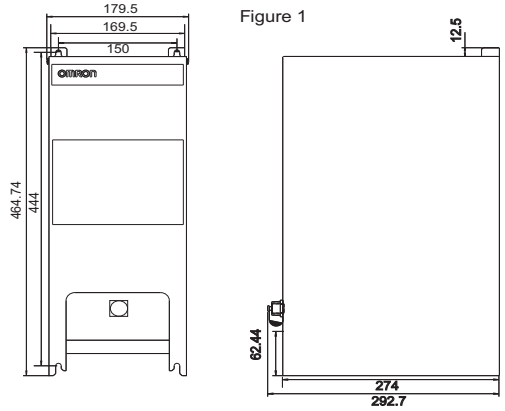

Figure 2

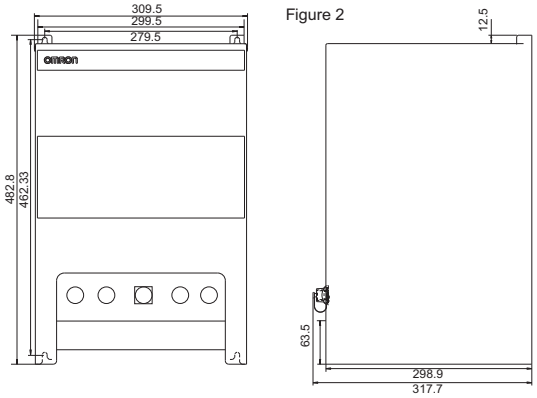

Figure 3

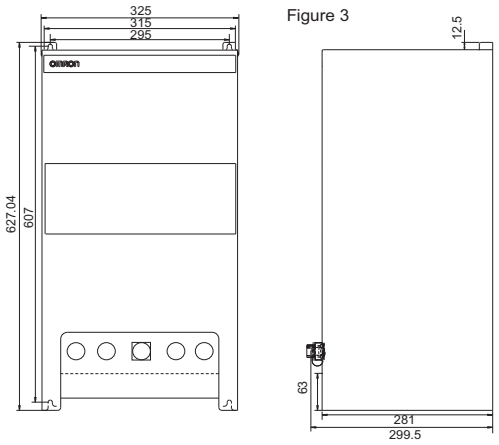

Figure 4

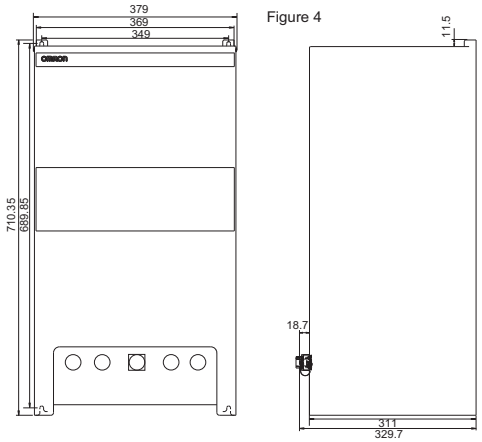

Figure 1	Figure 2	Figure 3	Figure 4
3G3MX2-DB001-E	3G3MX2-DB001-EC	3G3MX2-D2055-EC	3G3MX2-D2110-EC
3G3MX2-DB002-E	3G3MX2-DB002-EC	3G3MX2-D2075-EC	3G3MX2-D2150-EC
3G3MX2-DB004-E	3G3MX2-DB004-EC	3G3MX2-D4055-EC	3G3MX2-D4110-EC
3G3MX2-D2001-E	3G3MX2-DB007-EC	3G3MX2-D4075-EC	3G3MX2-D4150-EC
3G3MX2-D2002-E	3G3MX2-DB015-EC		
3G3MX2-D2004-E	3G3MX2-DB022-EC		
3G3MX2-D2007-E	3G3MX2-D2001-EC		
	3G3MX2-D2002-EC		
	3G3MX2-D2004-EC		
	3G3MX2-D2007-EC		
	3G3MX2-D2015-EC		
	3G3MX2-D2022-EC		
	3G3MX2-D2037-EC		
	3G3MX2-D4004-EC		
	3G3MX2-D4007-EC		
	3G3MX2-D4015-EC		
	3G3MX2-D4022-EC		
	3G3MX2-D4030-EC		
	3G3MX2-D4040-EC		

3G3MX2 Related Options

Type	Specifications								Model
	% ED	Voltage	Max. Motor kW	Inverter 3G3MX2-A□		Connectable min. resistance Ω	Resist Ω	Braking torque %	
				3-Phase	1-Phase				
BRAKING RESISTORS	3% 10 sec max.	200V (Single-/ Three-phase)	0.12	2001	B001	100	400	200	AX-REM00K1400-IE
			0.25	2002	B002			180	
			0.55	2004	B004		200	180	AX-REM00K1200-IE
			1.1	2007	B007	50		100	
			1.5	2015	B015		70	140	AX-REM00K2070-IE
			2.2	2022	B022	35		90	
			4.0	2037	-		75	50	AX-REM00K4075-IE
			5.5	2055	-	20	35	75	AX-REM00K4035-IE
			7.5	2075	-	17		55	
			11	2110	-		35	40	AX-REM00K6035-IE
			15	2150	-	10	17	55	AX-REM00K9017-IE
		400V (Three-phase)	0.55	4004	-	180	400	200	AX-REM00K1400-IE
			1.1	4007	-			200	
			1.5	4015	-		200	190	AX-REM00K1200-IE
			2.2	4022	-	100	200	130	AX-REM00K2200-IE
			3.0	4030	-		120	160	AX-REM00K2120-IE
			4.0	4040	-			120	
			5.5	4055	-	70	75	140	AX-REM00K4075-IE
			7.5	4075	-			100	
			11	4110	-		100	50	AX-REM00K6100-IE
			15	4150	-	30	70	55	AX-REM00K9070-IE
	10% 10 sec max.	200V (Single-/ Three-phase)	0.12	2001	B001	100	400	200	AX-REM00K1400-IE
			0.25	2002	B002			180	
			0.55	2004	B004		200	180	AX-REM00K1200-IE
			1.1	2007	B007	50	70	200	AX-REM00K2070-IE
			1.5	2015	B015		75	130	AX-REM00K4075-IE
			2.2	2022	B022	35	35	180	AX-REM00K4035-IE
			4.0	2037	-		35	100	AX-REM00K6035-IE
			5.5	2055	-	20	20	150	AX-REM00K9020-IE
			7.5	2075	-	17	17	110	AX-REM01K9017-IE
			11	2110	-		17	75	AX-REM02K1017-IE
			15	2150	-	10	10	95	AX-REM03K5010-IE
		400V (Three-phase)	0.55	4004	-	180	400	200	AX-REM00K1400-IE
			1.1	4007	-			200	
			1.5	4015	-		200	190	AX-REM00K2200-IE
			2.2	4022	-	100	120	200	AX-REM00K5120-IE
			3.0	4030	-			160	
			4.0	4040	-		100	140	AX-REM00K6100-IE
			5.5	4055	-	70	70	150	AX-REM00K9070-IE
			7.5	4075	-		70	110	AX-REM01K9070-IE
			11	4110	-		70	75	AX-REM02K1070-IE
			15	4150	-	30	35	110	AX-REM03K5035-IE

Type	Specifications				Model
	Type	Voltage	Inverter 3G3MX2-A□	Rated Current (A)	
EMC LINE FILTERS	Foot Mounting [Rasmi]	200V (Single-phase)	B001 / B002 / B004	10	**AX-FIM1010-RE**
			B007	14	**AX-FIM1014-RE**
			B015 / B022	24	**AX-FIM1024-RE**
		200V (Three-phase)	2001 / 2002 / 2004 / 2007	10	**AX-FIM2010-RE**
			2015 / 2022	20	**AX-FIM2020-RE**
			2037	30	**AX-FIM2030-RE**
			2055 / 2075	60	**AX-FIM2060-RE**
			2110	80	**AX-FIM2080-RE**
			2150	100	**AX-FIM2100-RE**
		400V (Three-phase)	4004 / 4007	5	**AX-FIM3005-RE**
			4015 / 4022 / 4030	10	**AX-FIM3010-RE**
			4040	14	**AX-FIM3014-RE**
			4055 / 4075	23	**AX-FIM3030-RE**
			4110 / 4150	50	**AX-FIM3050-RE**
	Separate Mounting [Schaffner]	200V (Single-phase)	B001 / B002 / B004	10	**AX-FIM1010-SE**
			B007 / B015 / B022	24	**AX-FIM1024-SE**
		200V (Three-phase)	2001 / 2002 / 2004 / 2007	10	**AX-FIM2010-SE**
			2015 / 2022	20	**AX-FIM2020-SE**
			2037	30	**AX-FIM2030-SE**
			2055 / 2075	60	**AX-FIM2060-SE**
			2110	80	**AX-FIM2080-SE**
			2150	100	**AX-FIM2100-SE**
		400V (Three-phase)	4004 / 4007	5	**AX-FIM3005-SE**
			4015 / 4022 / 4030	10	**AX-FIM3010-SE**
			4040	14	**AX-FIM3014-SE**
			4055 / 4075	23	**AX-FIM3030-SE**
			4110 / 4150	50	**AX-FIM3050-SE**

Type	Specifications		Model
	Voltage	Inverter 3G3MX2-A□	
INPUT AC REACTORS	200V (Single-phase)	B001 / B002 / B004 / B007 / B015 / B022	**UNDER DEVELOPMENT**
	200V (Three-phase)	2001 / 2002 / 2004 / 2007	**AX-RAI02800080-DE**
		2015 / 2022 / 2037	**AX-RAI00880200-DE**
		2055 / 2075	**AX-RAI00350335-DE**
		2110 / 2015	**AX-RAI00180670-DE**
	400V (Three-phase)	4004 / 4007 / 4015	**AX-RAI07700050-DE**
		4022 / 4030 / 4040	**AX-RAI03500100-DE**
		4055 / 4075	**AX-RAI01300170-DE**
		4110 / 4150	**AX-RAI00740335-DE**

Type	Specifications		Model
	Voltage	Inverter 3G3MX2-A□	
DC REACTORS	200V (Single-phase)	B001 / B002	AX-RC10700032-DE
		B004	AX-RC06750061-DE
		B007	AX-RC03510093-DE
		B015	AX-RC02510138-DE
		B022	AX-RC01600223-DE
	200V (Three-phase)	2001 / 2002	AX-RC21400016-DE
		2004	AX-RC10700032-DE
		2007	AX-RC06750061-DE
		2015	AX-RC03510093-DE
		2022	AX-RC02510138-DE
		2037	AX-RC01600223-DE
		2055	AX-RC01110309-DE
		2075	AX-RC00840437-DE
		2110	AX-RC00590614-DE
		2150	AX-RC00440859-DE
	400V (Three-phase)	4004	AX-RC43000020-DE
		4007	AX-RC27000030-DE
		4015	AX-RC14000047-DE
		4022	AX-RC10100069-DE
		4030	AX-RC08250093-DE*
		4040	AX-RC06400116-DE
		4055	AX-RC04410167-DE
		4075	AX-RC03350219-DE
		4110	AX-RC02330307-DE
		4150	AX-RC01750430-DE
OUTPUT AC REACTORS	200V (Single-phase)	B001 / B002 / B004	AX-RAO11500026-DE
		B007	AX-RAO07600042-DE
		B015	AX-RAO04100075-DE
		B022	AX-RAO03000105-DE
	200V (Three-phase)	2001 / 2002 / 2004	AX-RAO11500026-DE
		2007	AX-RAO07600042-DE
		2015	AX-RAO04100075-DE
		2022	AX-RAO03000105-DE
		2037	AX-RAO01830160-DE
		2055	AX-RAO01150220-DE
		2075	AX-RAO00950320-DE
		2110	AX-RAO00630430-DE
		2150	AX-RAO00490640-DE
	400V (Three-phase)	4004 / 4007 / 4015	AX-RAO16300038-DE
		4022	AX-RAO11800053-DE
		4030 / 4040	AX-RAO07300080-DE
		4055	AX-RAO04600110-DE
		4075	AX-RAO03600160-DE
		4110	AX-RAO02500220-DE
		4150	AX-RAO02000320-DE

*Under Development

Type	Specifications		Model
	Description	Diameter	
RADIO NOISE FILTERS	For 2.2 kW motors or below	21	**AX-FER2102-RE**
	For 15 kW motors or below	25	**AX-FER2515-RE**
	For 45 kW motors or below	55	**AX-FER5045-RE**

Type	Description	Model
COMMUNICATON OPTION	CompoNet option board	**3G3AX-MX2-CRT-E**
	DeviceNet option board	**3G3AX-MX2-DRT-E**
	EtherCat option board	**3G3AX-MX2-ECT**
	EtherNet/P option board	**3G3AX-MX2-EIP-A**
	Mechatrolink II option board	**3G3AX-MX2-MRT-E**
	Profibus option board	**3G3AX-MX2-PRT-E**
	CanOpen option board	**3G3AX-MX2-CORT***
PC CABLE	PC Communication cable (2m, PC USB to Mini USB Connecting Cable with Ferrite)	**AX-CUSBM002-E**
REMOTE OPERATOR	LCD Remote operator (5 Line LCD remote operator with copy function, cable length max. 3m.)	**AX-OP05-E**
	LED Remote operator with frequency reference volume	**3G3AX-OP01**
	3 meters cable for connecting remote operator	**3G3AX-CAJOP300-EE**
	Mounting Kit for LED Operator	**4X-KITMINI**

✻ Available soon. Please contact OMRON for availability.

Related Manuals

Manual No.	Model	Category
I570	3G3MX2	USERS MANUAL
I114E	3G3AX-MX2-CRT-E	COMPONET COMMUNICATION OPTION BOARD USERS MANUAL
I112E	3G3AX-MX2-DRT-E	DEVICENET COMMUNICATION OPTION BOARD USERS MANUAL
I574	3G3AX-MX2-ECT	ETHERCAT COMMUNICATION OPTION BOARD USERS MANUAL
I361	3G3AX-MX2-EIP-A	ETHERNET/IP COMMUNICATION OPTION BOARD USERS MANUAL
I111E	3G3AX-MX2-PRT-E	PROFIBUS COMMUNICATION OPTION BOARD USERS MANUAL
W453	CXONE-AL□□C/D-V□ WS02-DRVC01	OPERATION MANUAL

Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user’s programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON’s test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

Singapore Office:
OMRON ELECTRONICS PTE. LTD.
438A Alexandra Road, #05-05/08
(Lobby 2) Alexandra Technopark
Singapore 119967
Tel: (65) 6547 6789
Fax: (65) 6547 6769
E-mail: mktg_sg@ap.omron.com

Malaysia Office:
OMRON ELECTRONICS SDN. BHD.
1101 Level 11 Uptown 1
1 Jalan SS21/58 Damansara Uptown
47400 Petaling Jaya, Selangor
Malaysia
Tel: (60-3) 7688 2888
Fax: (60-3) 7688 2833
E-mail: my_enquiry@ap.omron.com

Thailand Office:
OMRON ELECTRONICS CO. LTD.
Rasa Tower 2 16th Floor
555 Phaholyothin Road
Chatuchak, Bangkok
10900, Thailand
Tel: (66-2) 937 0500
Fax: (66-2) 937 0501
CRM Call Centre: (66-2) 942 6700
E-mail: th_enquiry@ap.omron.com

Indonesia Office:
PT. OMRON ELECTRONICS
Graha Pratama Building, 3A Floor
Jl. M.T. Haryono Kav 15
Jakarta Selatan 12810
Indonesia
Tel: (62-21) 8370 9555
Fax: (62-21) 8370 9550
E-mail: id_enquiry@ap.omron.com

Philippines Office:
OMRON ASIA PACIFIC PTE. LTD.
MANILA REPRESENTATIVE OFFICE
2nd Floor, Kings Court II Building
2129 Do Chino Roces Avenue
Corner Dela Rosa Street
1231 Makati City, Metro Manila
Philippines
Tel: (63-2) 811 2831
Fax: (63-2) 811 2583
E-mail: ph_enquiry@ap.omron.com

Australia Offices:
Sydney Office:
OMRON ELECTRONICS PTY. LTD.
Omron House
71 Epping Road, North Ryde
Sydney, New South Wales 2113
Australia
Tel: (61-2) 9878 6377
Fax: (61-2) 9878 6981
Toll Free: 1800 678838
E-mail: au_enquiry@ap.omron.com

Melbourne Office:
OMRON ELECTRONICS PTY. LTD.
Axxess Corporate Park
Unit 98, 45 Gilby Road
Mt Waverley Victoria 3149
Australia
Tel: (61-3) 8588 2600
Fax: (61-3) 8588 2690
E-mail: au_enquiry@ap.omron.com

Brisbane Office:
OMRON ELECTRONICS PTY. LTD.
Unit 14, 1378 Lytton Road
Hemmant 4174, Queensland
Australia
Tel: (61-7) 3859 3900
Fax: (61-7) 3348 8701
E-mail: au_enquiry@ap.omron.com

Adelaide Office:
OMRON ELECTRONICS PTY. LTD.
Suite 12, 18 Humpheries Terrace
Kilkenny, SA 5009
Australia
Tel: (61-8) 8440 6412
Fax: (61-8) 8345 1204
E-mail: au_enquiry@ap.omron.com

New Zealand Office:
OMRON ELECTRONICS LTD.
65 Boston Road, Mt Eden
Private Bag 92620
Symonds Street, Auckland
New Zealand
Tel: (64-9) 358 4400
Fax: (64-9) 358 4411
E-mail: nz_enquiry@ap.omron.com

India Offices:
Mumbai Office:
OMRON AUTOMATION PVT. LTD.
Kalpataru Square, Office Unit No. 32
off Andheri-Kurla Road, Andheri (East),
Mumbai- 400059
India
Tel: (91-22) 4228 8400
Fax: (91-22) 4275 5602
E-mail: in_enquiry@ap.omron.com

Bangalore Office:
OMRON AUTOMATION PVT. LTD.
No. 43, G.N. Complex
St.Johns Road
Bangalore - 560 042
India
Tel: (91-80) 4072 6400/401
Fax: (91-80) 4146 6403
E-mail: bangalore_enquiry@ap.omron.com

Gurgaon Office:
OMRON AUTOMATION PVT. LTD.
No.108 &103-106, 1/F, Sewa Corporation Park,
MG Road, Gurgaon, Haryana 122002
India
Tel: (91-124) 4921700
Fax:(91-124) 4921777
E-mail: newdelhi_enquiry@ap.omron.com

Vietnam Offices:
OMRON ASIA PACIFIC PTE. LTD.
HANOI REPRESENTATIVE OFFICE
6th Floor, 92 Hoang Ngan Street
Trung Hoa, Cau Giay
Hanoi, SR Vietnam
Tel: (84-4) 3556 3444
Fax: (84-4) 3556 3443
E-mail: hn_enquiry@ap.omron.com

HO CHI MINH REPRESENTATIVE OFFICE
2nd Floor, IWA, 102 A-B, Cong Quynh,
P. Pham Ngu Lao, Q1, TP. Ho Chi Minh
SR Vietnam
Tel: (84-8) 3920 4338
Fax: (84-8) 3920 4335
E-mail: hcm_enquiry@ap.omron.com

Asia Pacific Head Office:
OMRON ASIA PACIFIC PTE. LTD.
438A Alexandra Road
#05-05/08
(Lobby 2) Alexandra Technopark
Singapore 119967
Tel: (65) 6835 3011 Fax: (65) 6835 2711
E-mail: ask@ap.omron.com

Website: www.omron-ap.com

Authorized Distributor

Cat. No. I916-E4-02